


PRIOR TO INSTALLATION

Ensure install location has a minimum of 2 to 3 hours of direct midday sun exposure for best performance. Please handle fixture with care as scratches will affect appearance and powder coat durability.

TOOLS REQUIRED

- 5/32 inch hex key

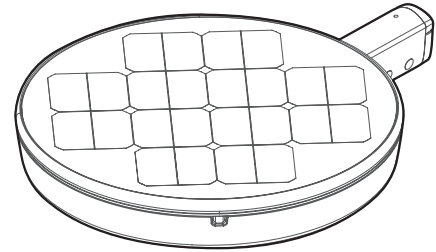

TO INSTALL

1. Identify cleat mount location on secure vertical surface and place cleat ensuring that the mounting holes are vertical.
2. Securely fasten cleat to surface with appropriate anchoring methods using 1/4" fasteners.
3. With the Luminaire tilted, approach the cleat from above and hook side arm clip onto the cleat until flush.
4. Carefully transfer the weight of the Luminaire onto the cleat and remove grip on the Luminaire once connection is deemed to be secure. Using a 5-32" hex tool, install the 1/4-20 button head screw in the top of the side arm.
5. Press blue clasp and then open lid upwards.
6. Locate two sets of disconnected connectors and connect. Listen for an audible click.

