


PRIOR TO INSTALLATION

Ensure install location has a minimum of 2 to 3 hours of direct midday sun exposure for best performance. Please handle fixture with care as scratches will affect appearance and powder coat

TOOLS REQUIRED

- 1/8" Hex

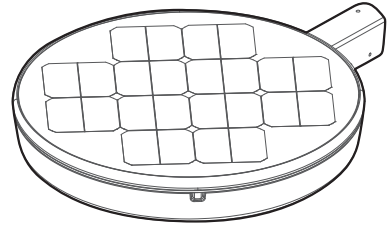

TO INSTALL

1. Slide Luminaire onto 2-3/8" diameter tenon until tenon is full depth and comes to stop against interior stop of Luminaire.
2. Ensure Luminaire is level.
3. Using a 1/8" hex tool, tighten 4 set screws (2 on each side of mount) until the Luminaire is secure.
4. Insert securing pin in top hole of side arm until head of pin comes to rest against top of side arm.
5. Press blue clasp and then open lid upwards.
6. Locate two sets of disconnected connectors and connect. Listen for an audible click.

