




LATERAL ZIPPERS

STEP 1




Unpick the outboard side of the cable channel.

STEP 2

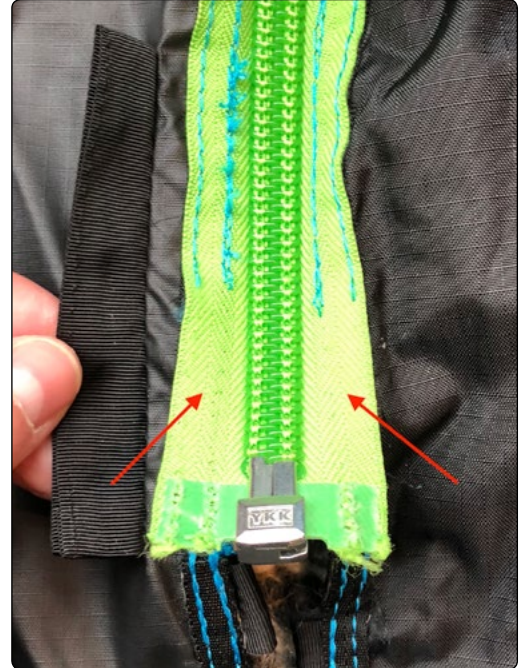


Unpick each side of the zipper-end approximately 4cm (or more if required for lateral clearance).

STEP 3

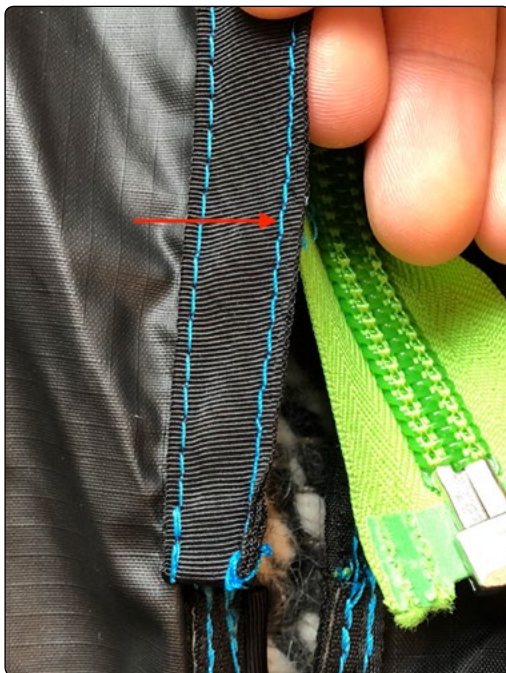

Sew the cable channel closed.

STEP 4

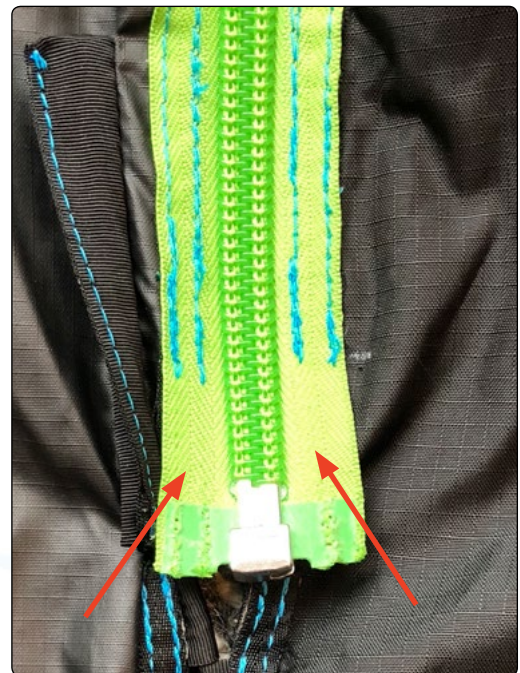

Add a few backstitches, leaving the last 4cm free.