

# DeckBox - field kit

## GET STARTED WITH YOUR DECKBOX - FIELD KIT



1. Open the DeckBox - field case.




2. Release the Live with cable from its holder on the lid of the field case.



3. Locate the Link BT main unit (Jump to step 10 if the battery is already inserted into the Link BT).




4. Open the housing using the supplied tool, or a coin, screwdriver etc. Turn counter-clockwise to push open and expose the battery compartment.

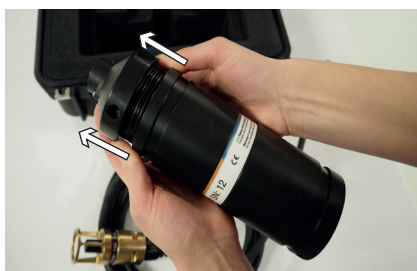

5. You might have to pry gently with your fingers, to fully separate the top from the lower casing.



6. Remove the metal disc and release battery leads to expose the battery compartment.

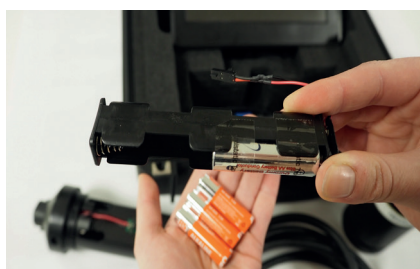

7. The battery holder has four slots for AA batteries. One of them is pre-loaded with a dummy battery to match the total voltage correctly. **N.B.** Do not remove the dummy battery but insert three standard AA batteries in the remaining free slots.




8. Insert the battery holder back into its compartment.



9. Connect the battery leads into the pictured connector on the outside of the compartment and slide the metal disc back into place.



**10.** Close Link BT main unit. Screw clockwise only until the gap by the top closes. No extra tightening is needed to seal.

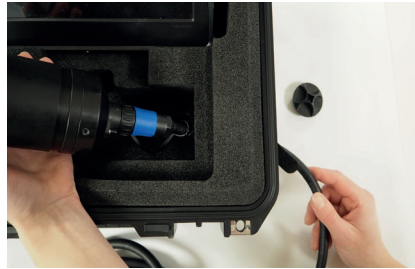


**11.** Unscrew the dust cap from the connector of the 5m Live Ecomate cable, remove the small lid on the right side of the DeckBox field case, slide the cable through and attach the 5m Live Ecomate cable to the Link BT. Keep the lid in the case.



**12.** The LED indicator will flash 3 x green immediately when connected, followed by a yellow flash when the Link BT has detected the Live. The LED indicator will then flash red two times every five seconds until LiveView connection is established.



**13.** Locate the Surface Go tablet and make sure it is charged. Turn on Surface Go tablet (long, hard push of the button on the backside of rugged casing).

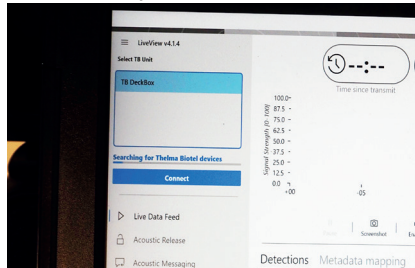

**14.** Open LiveView on the tablet and press "Connect" to open communication to the Link/Live unit. (Bluetooth is automatically enabled at start-up of Link BT main unit, it shows up in the connection list of LiveView as "DeckBox").



**15.** Once LiveView connection is established, the clock will be set to the computer time and the red heart-beat flashes will change to green.



**16.** The power switch of the unit is located inside of the Ecomate connector. Remember to disconnect cable from Link BT after use. The battery is completely disconnected once the cable is separated from the Link BT.



#### **Tips for use:**

- Bring some extra AA batteries as spares.
- You may charge and extend tablet operation time with a standard USB power bank.
- Rinse salt water off from the equipment after use.
- Use the protective dust cap on the cable connector and the little lid on the field case during transport.